
140 mm

205 mm

EN

INSTRUCTION MANUAL

RC DINO

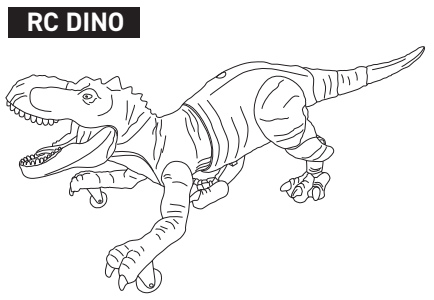

SAFETY PRECAUTIONS:

- Always read the instructions with your children before using the product for the first time.
- Before picking up the T-Rex, turn it off using the controller.
- Keep your hands, hair, and clothing away from moving parts while the toy is operating.
- Do not use the RC Dino out on the street. Avoid collisions with people, animals, and furniture.
- The wires must not be inserted into electrical outlets.


BATTERY WARNING:

- Rechargeable batteries must be removed before recharging.
- Rechargeable batteries must be recharged under adult supervision.
- Do not mix different types of batteries or combine new and used batteries.
- Only use the recommended type of batteries, inserting them with the correct positive (+) and negative (-) polarity.
- Used batteries must be removed from the product.

CARE AND MAINTENANCE:

- Always remove the batteries from the product if it is not used for a long time.
- Wipe the toy gently with a clean cloth.
- Keep the toy away from direct sources of heat.
- Do not immerse the toy in water, as this could damage electronic components.
- Replace batteries when they become weak.

OPERATION OF 2.4G CONTROLLER:

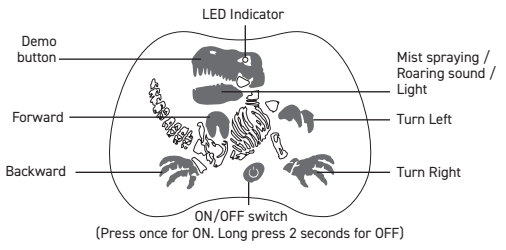


(Press once for ON. Long press 2 seconds for OFF)

DEMO BUTTON:


- **Press the button once:** The T-Rex will demonstrate its movements, including walking forward, backward, turning left and right, while wagging its tail, swaying its body, and playing different sounds automatically.
- **To turn off the sound effects:** Long press the button for 3 seconds.
- **To turn the sound effects back on:** Long press the button for 3 seconds again.

ASSEMBLY OF T-REX:

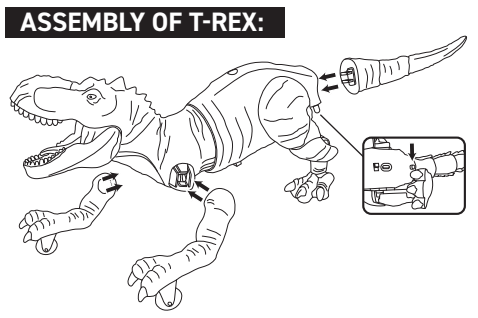


- Arm assembly: Align the top connection of the arm with the body connection port and insert it.
- Tail assembly: Press the button to plug out the tail. Plug in the tail to connect it back.

CHARGING OF T-REX:

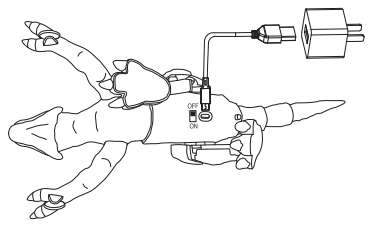

- Plug the Micro USB into the USB socket found on the bottom of the T-Rex.
- Connect the other end of the USB cable to a USB port on your computer or to an adapter (such as a phone charger).
- The T-Rex will take approximately 2 hours to fully charge and will operate for approximately 15 minutes.
- During charging, the indicator light on the bottom of the T-Rex will glow a steady red. When fully charged, the indicator light will turn off.
- Disconnect the USB cable and turn on the power switch to start playing.

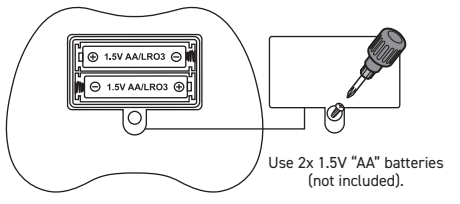

Use 2x 1.5V "AA" batteries (not included).

BATTERY INSTALLATION:

- Press the button once: The T-Rex will demonstrate its movements, including walking forward, backward, turning left and right, while wagging its tail, swaying its body, and playing different sounds automatically.
- To turn off the sound effects: Long press the button for 3 seconds.
- To turn the sound effects back on: Long press the button for 3 seconds again.


LED INDICATOR:

- LED Indicator Blinking – Frequency connection issue or weak controller signal.
- LED Indicator Constantly On – Successful connection without any operating actions.


OTHERS:

Power saving mode: The controller will automatically turn off after a period of inactivity. To resume using the toy, simply press the power button on the controller.


OPERATION OF RC DINO:

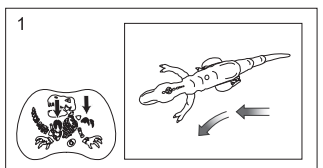


1 Press and hold the forward and left buttons simultaneously to walk forward towards the left side.

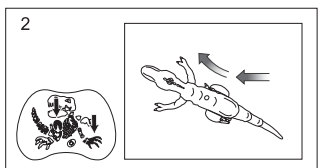


2 Press and hold the forward and right buttons simultaneously to walk forward towards the right side.

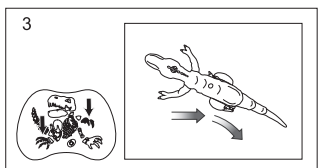


3 Press and hold the back and left buttons simultaneously to walk backwards towards the left side.

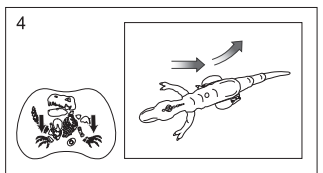


4 Press and hold the back and right buttons simultaneously to walk backwards towards the right side.

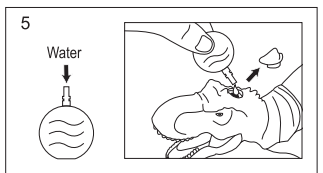


5 Use the container to fill the head of the T-Rex with water.

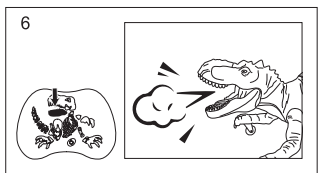

6 Press the lower jaw- button to activate the roaring and spraying functions.



7 Press the head-button for an automatic demonstration with movement, sound effects, and mist spray.



8 For automatic demonstration without using the controller, press the button on the T-Rex' back. This will activate movement, sound effects, and mist spray.

TROUBLE SHOOTING:

PROBLEM	REASON	SOLUTION
No response and LED indicator off	· Low batteries in the RC Dino and/or the controller. · System malfunction due to possible interference of the RC Dino or controller.	· Recharge the RC Dino or replace the batteries in the controller. · Try resetting the system by removing and reinserting the batteries.
RC Dino is out of control	· Another RC Dino nearby might be interfering with your signal, or your RC Dino might be out of operating range.	· Try moving to an area with less wireless interference. · If there are other RC Dinos nearby, turn them off and then restart your T-Rex.
Slow running or running failure of RC Dino	· Low battery · Hair, threads or other debris stuck in the wheels. · Weak battery or worn-out motor.	· Recharge the battery. · Carefully remove any hair, threads, or other debris stuck in the wheels. · If the problem persists after trying these steps, contact the distributor for repair information.

Warnings!

Choking Hazard - Small Parts.
Keep out of reach of children under 3 years old.
Remove all packaging materials and wire fasteners before giving this toy to a child.

Waste electrical and electronic equipment (WEEE): When this device reaches the end of its life please remove all batteries and dispose of them separately at designated collection points. Take the entire device to a collection center for electronic equipment and household appliances. Other components can be disposed of with household waste according to local regulations.

NL

HANDLEIDING

RC DINO



VEILIGHEIDSMAATREGELEN:

- Lees altijd samen met je kinderen de instructies voordat je het product voor het eerst gebruikt.
- Schakel de T-Rex uit met de controller voordat je hem oppakt.
- Houd je handen, haar en kleding uit de buurt van bewegende delen wanneer het speelgoed in werking is.
- Gebruik de RC Dino niet op straat. Vermijd botsingen met mensen, dieren en meubels.
- De draden mogen niet in stopcontacten worden gestoken.


WAARSCHUWING VOOR DE BATTERIJ:

- Oplaadbare batterijen moeten worden verwijderd voordat ze worden opgeladen.
- Oplaadbare batterijen moeten worden opgeladen onder toezicht van een volwassene.
- Gebruik geen verschillende soorten batterijen door elkaar en combineer geen nieuwe en gebruikte batterijen.
- Gebruik alleen het aanbevolen type batterijen en plaats ze met de juiste positieve (+) en negatieve (-) polariteit.
- Gebruikte batterijen moeten uit het product worden verwijderd.

ZORG EN ONDERHOUD:

- Verwijder altijd de batterijen uit het product als deze lange tijd niet wordt gebruikt.
- Veeg het speelgoed voorzichtig af met een schone doek.
- Houd het speelgoed uit de buurt van directe warmtebronnen.
- Dompel het speelgoed niet onder in water, omdat dit de elektronische onderdelen kan beschadigen.
- Vervang batterijen als ze zwak worden.

BEDIENING VAN 2.4G CONTROLLER:

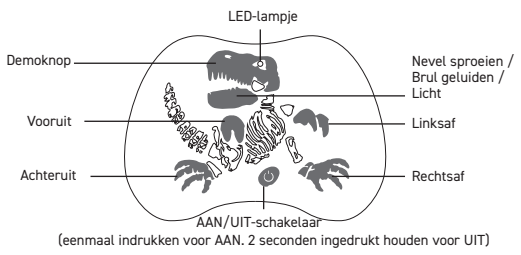


(eenmaal indrukken voor AAN. 2 seconden ingedrukt houden voor UIT)

DEMOKNOP:


- **Druk één keer op de knop:** De T-Rex demonstreert zijn bewegingen, zoals vooruit lopen, achteruit lopen, naar links en rechts draaien, terwijl hij met zijn lichaam en staart beweegt en automatisch verschillende geluiden afspeelt.
- **De geluidseffecten uitschakelen:** Houd de knop 3 seconden ingedrukt.
- **De geluidseffecten weer inschakelen:** Houd de knop opnieuw 3 seconden ingedrukt.

MONTAGE VAN T-REX:

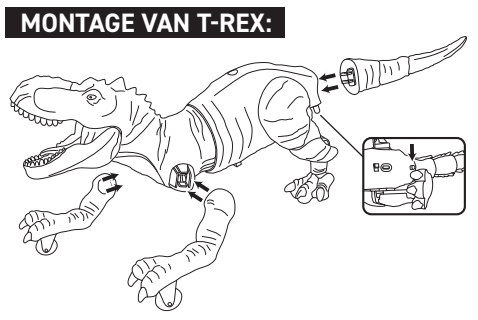


- Montage van de arm: Lijn de bovenste aansluiting van de arm uit met de aansluitpoort van het lichaam en verbind de 2 delen.
- Staartmontage: Druk op de knop om de staart eruit te halen. Steek de staart erin om hem weer aan te sluiten.

OPLADEN VAN T-REX:

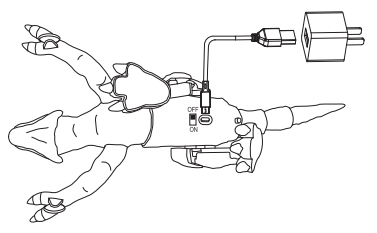

- Steek de Micro USB in de USB-aansluiting aan de onderkant van de T-Rex.
- Sluit het andere uiteinde van de USB-kabel aan op een USB-poort van je computer of op een adapter (zoals een telefoonoplader).
- Het duurt ongeveer 2 uur om de T-Rex volledig op te laden en het apparaat werkt ongeveer 15 minuten.
- Tijdens het opladen brandt het indicatielampje aan de onderkant van de T-Rex continu rood. Wanneer het apparaat volledig is opgeladen, gaat het lampje uit.
- Koppel de USB-kabel los en zet de aan/uit-schakelaar aan om te beginnen met spelen.

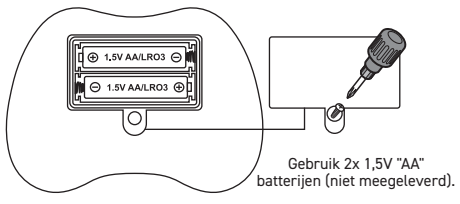

Gebruik 2x 1,5V "AA" batterijen (niet meegeleverd).

BATTERIJ INSTALLEREN:

- Zoek het batterijvak aan de onderkant van de controller.
- Schroef het batterijklepje los met een schroevendraaier (niet meegeleverd).
- Plaats 2x 1,5V "AA"-batterijen in het batterijvak en zorg dat ze overeenkomen met de positieve (+) en negatieve (-) markeringen.
- Sluit het batterijklepje en draai de schroef stevig vast.


LED-INDICATOR:

- LED Indicator Knippert - Probleem met de frequentieverbinding of zwak signaal van de controller.
- LED Indicator Constant Aan - Succesvolle verbinding zonder enige besturingshandelingen.


OVERIGE:

Energiebesparende modus: De controller wordt automatisch uitgeschakeld na een periode van inactiviteit. Om het speelgoed weer te gebruiken, druk je gewoon op de aan/uit-knop op de controller.


BEDIENING VAN RC DINO

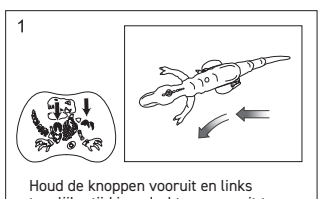


1 Houd de knoppen vooruit en links tegelijkertijd ingedrukt om vooruit te lopen naar de linkerkant.

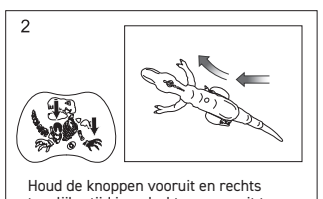


2 Houd de knoppen vooruit en rechts tegelijkertijd ingedrukt om vooruit te lopen naar de rechterkant.

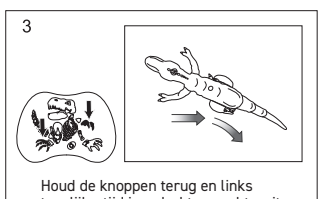

3 Houd de knoppen terug en links tegelijkertijd ingedrukt om achteruit naar de linkerkant te lopen.

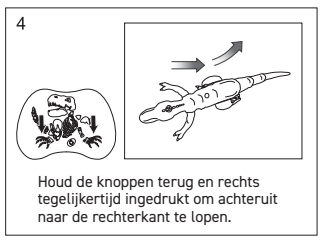


4 Houd de knoppen terug en rechts tegelijkertijd ingedrukt om achteruit naar de rechterkant te lopen.

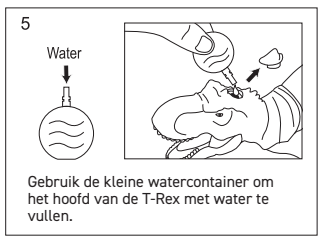


5 Gebruik de kleine watercontainer om het hoofd van de T-Rex met water te vullen.



6 Druk op de onderkaak-knop om de brul- en spuitfuncties te activeren.

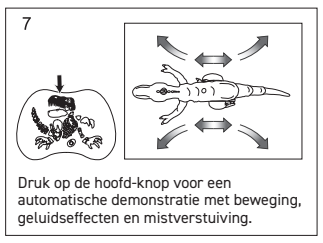

7 Druk op de hoofd-knop voor een automatische demonstratie met beweging, geluidseffecten en mistverstuiving.

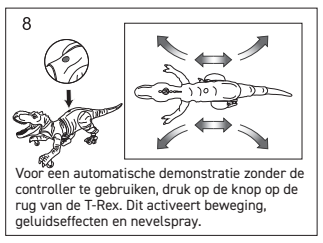

8 Voor een automatische demonstratie zonder de controller te gebruiken, druk op de knop op de rug van de T-Rex. Dit activeert beweging, geluidseffecten en nevelspray.

PROBLEMEN OPLOSSEN:

PROBLEEM	REDEN	OPLOSSING
Geen reactie en LED-indicator uit	· Lege batterijen in de RC Dino en/of de controller. · Systeemstoring door mogelijke connectie interferentie met de RC Dino of controller.	· Laad de RC Dino op of vervang de batterijen in de controller. · Probeer het systeem te resetten door de batterijen te verwijderen en opnieuw te plaatsen.
Geen controle meer over de RC Dino	· Het kan zijn dat een andere RC Dino in de buurt je signaal verstoort, of dat je RC Dino buiten bereik is.	· Probeer te verhuizen naar een gebied met minder draadloze interferentie. · Als er andere RC Dinos in de buurt zijn, schakel ze dan uit en start je T-Rex opnieuw op.
RC Dino loopt langzaam of werkt niet	· Batterij bijna leeg · Haar, draden of ander vuil zit vast in de wielen. · Zwakke batterij of versleten motor.	· Laad de batterij op. · Verwijder voorzichtig haren, draden of ander vuil dat in de wielen vastzit. · Als het probleem aanhoudt na het proberen van deze stappen, neem dan contact op met de distributeur voor reparatie-informatie.

Waarschuwingen!

Verstikkingsgevaar - Kleine onderdelen.
Buiten bereik van kinderen jonger dan 3 jaar bewaren.
Verwijder alle verpakkingsmaterialen en draadbevestigingen voordat je dit speelgoed aan een kind geeft.

Waste electrical and electronic equipment (WEEE): When this device reaches the end of its life please remove all batteries and dispose of them separately at designated collection points. Take the entire device to a collection center for electronic equipment and household appliances. Other components can be disposed of with household waste according to local regulations.